# **DIVISION 26 – ELECTRICAL**

#### SECTION 26 05 46 – UTILITY POLES FOR ELECTRICAL SYSTEMS

#### PART 1: GENERAL

A. Overhead electrical distribution and transformers are not allowed on this campus.

## PART 2: PRODUCT (NOT USED)

### PART 3: EXECUTION (NOT USED)

END OF SECTION 26 05 46