


Gen5 Video Conferencing & Rear Display Quick Guide

Camera Controls

Change cameras between the **Presenter** and **Class** cameras

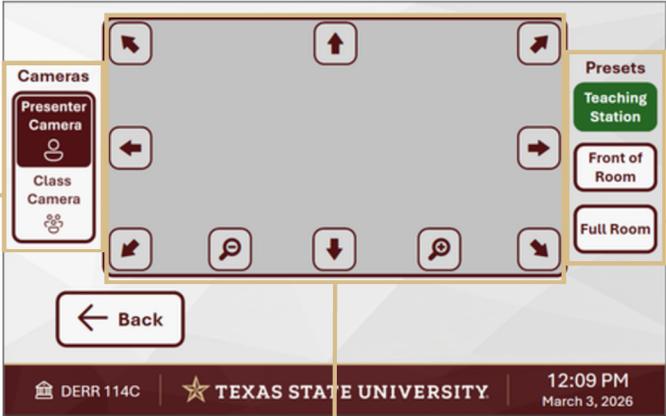

Use the **presets** for both cameras

See the **live preview** of what the camera is shooting; **manually move** the camera

Rear Display Controls

Tap the **Rear Display** button to open the Share selection

Tap **Share** to change

Tap **Stop Sharing** to turn the rear display off.

The rear display **always** mirrors one of the monitors (right monitor is default).

