DLP Control System - Meeting

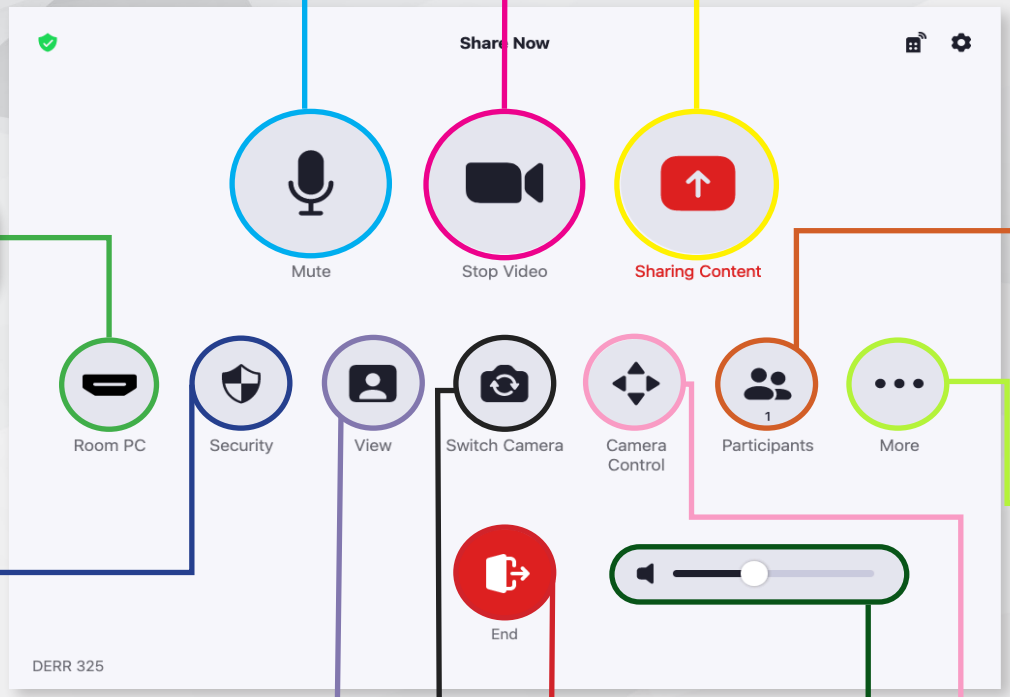

Mute the meeting audio.

Turn on or off the camera.

Change the source or start sharing content to the meeting.

Connect to the Room PC.

View and manage meeting participants.

Options to invite participants*, record the meeting, chat with participants, create breakout rooms, and send re-actions.

Change the meeting's security settings.

Adjust the camera in the back of the room.

Set what is being viewed in the meeting.

End the meeting or leave the meeting.

Change the camera and multi-display settings.

Adjust the volume level.

*This might appear as its own option on the screen.