Gen. 1-2 Control Panel

Connect a laptop using VGA + audio jack or using HDMI.

Connect an external audio source (e.g. phone or MP3 player) or switch to computer.

Turn the projector on and off.
Show or remove a blank screen.
Freeze or unfreeze the displayed screen.

Connect a hand microphone

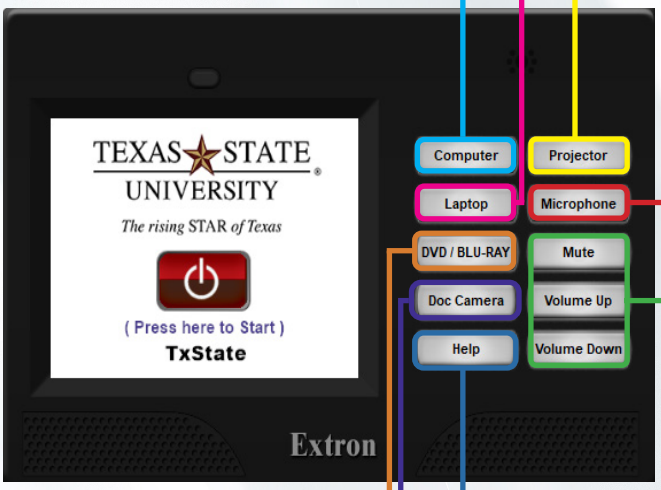

Mute or unmute system audio.
Turn system volume up or down (automatically unmutes system).

Use the Blu-ray player in the room (can also use separate remote control).

Find phone number for technical assistance.
Reset system settings to default.
Shutdown system.

Use the connected document camera.
Show or remove a blank screen.