Gen. 4 Control System

Change the source for the Presentation (projector) display.

Change the source for the Preview display.

Change the source for the audio.

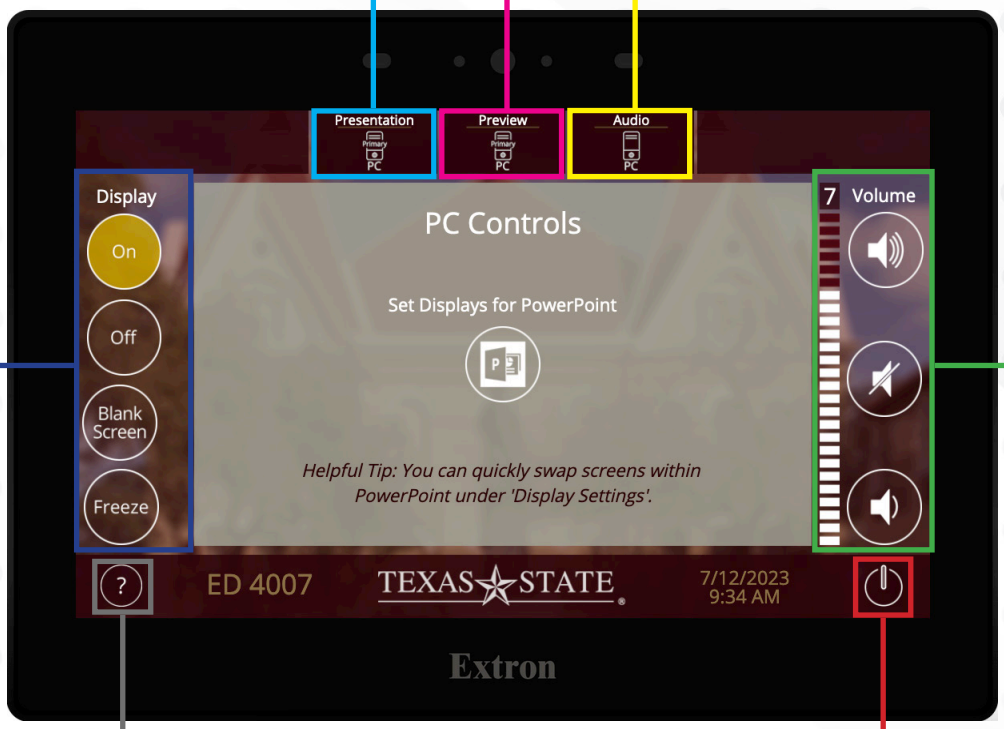

Turn the projector on or off.
Show or remove a blank screen.
Freeze or unfreeze the displayed screen.

Shutdown system.

Find phone number for technical assistance.
Reset system settings to default.

See the current volume setting.
Turn system volume up or down.
Mute the system audio.